



Kodak EasyShare CD82 LCD Display Screen Replacement

Step by step guide to remove and replace the LCD display screen for a Kodak EasyShare CD82.

Written By: oldturkey03



INTRODUCTION

Use this guide to disassemble a Kodak EasyShare CD82, in order to remove and replace the LCD display screen.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Soldering Station](#) (1)
-

Step 1 — LCD Screen



- Remove the batteries and the memory card from the device.
- Remove the 2 screws located at the bottom of the device.

Step 2




- Remove the 2 screws on the side, to the left of the camera lens.
- Remove the 2 screws on the side, to the right of the camera lens.
- Pry the casing from the device starting at the battery compartment and following the seam around the camera.

Step 3





- Remove the front panel from the device first, then remove the back panel.
- Do not remove the LCD screen from the device once it becomes visible.

Step 4

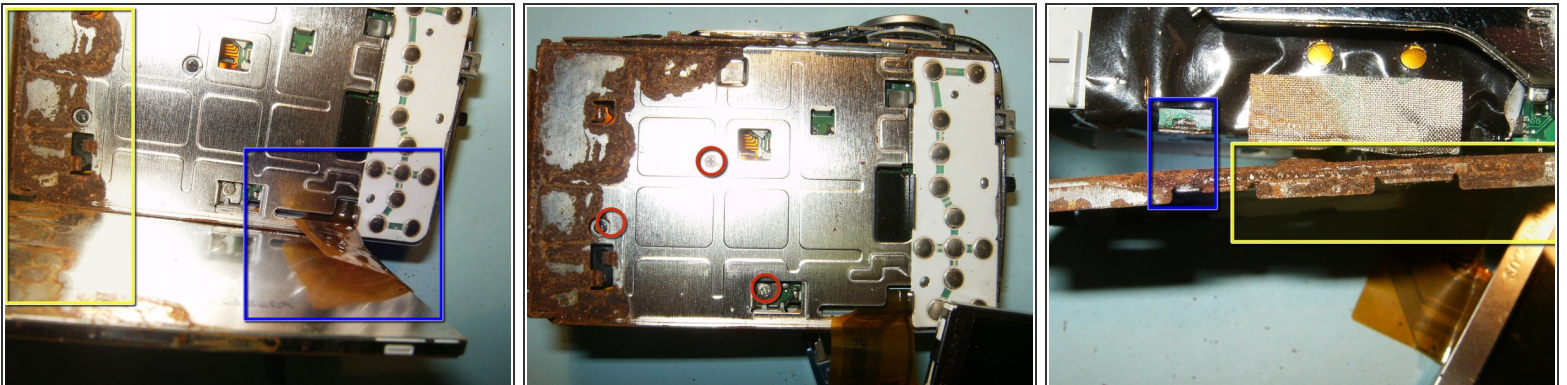

- Flip the LCD screen away from the top of the device to reveal the ribbon cable.
 - This is water damage the has afflicted the camera.
- Remove the 3 screws from the LCD screen holder.
- Pry the screen holder from the circuit board connector.

Step 5

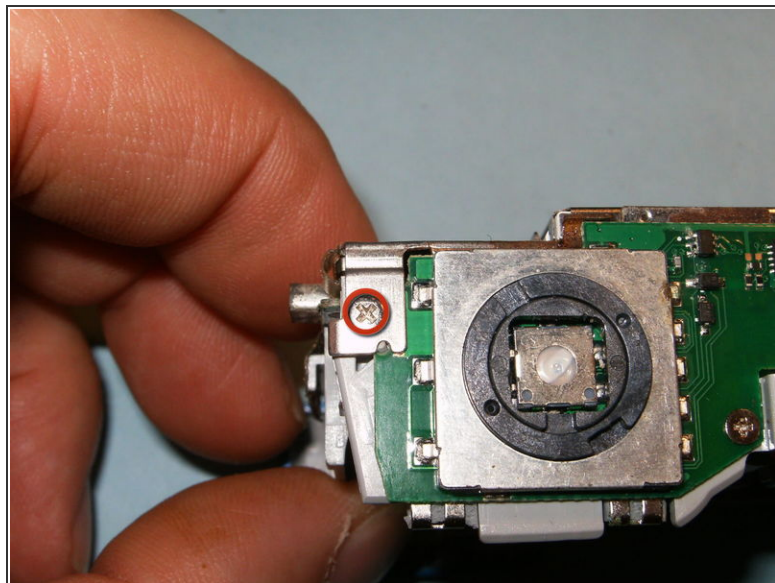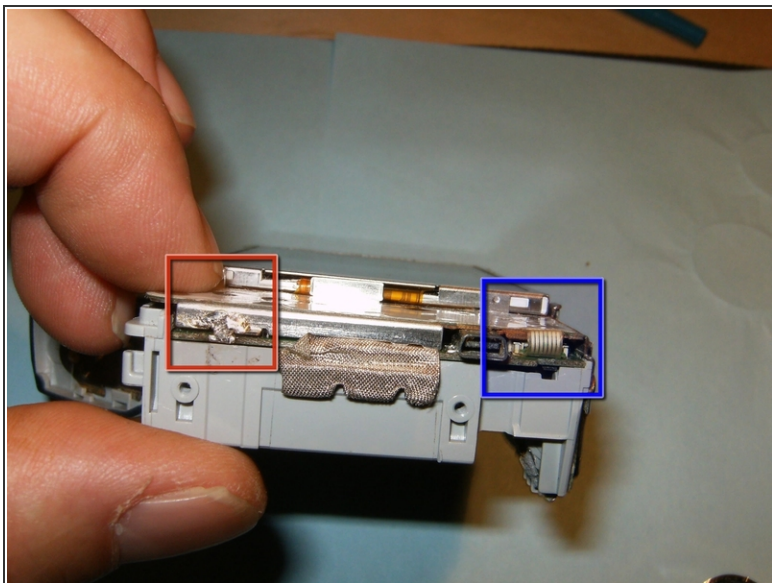

- Disconnect the logic board from the right side of the frame.
- Remove the small ribbon cable that is connecting the button panel to the logic board, using a small pair of tweezers or hemostat.
- Remove the screw on the top right side of the device.

Step 6



- Open the connector and move the black clip into the upward position, freeing the cable. Remove the LCD screen and the holder.
- ⓘ While the camera is disassembled, use isopropyl alcohol to remove rust and clean the device.
- Follow these steps in reverse order to reassemble. The device should be fully functional upon completion.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 07:35:40 AM.